

IMPORTANT NOTE

How to change the battery on your Accu-jet® S



Unscrew the adapter housing.

Lightly push the top cover towards the screw connection.



Be careful with the plastic tabs on the top cover.




Remove the top cover of the housing.

Unclip and remove the battery cable.



To insert a new battery, push the plug firmly into the socket until it snaps into place.

Insert the top cover.

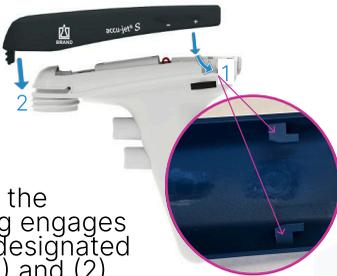

Ensure the housing engages in the designated slots (1) and (2).

Press the upper housing section into the housing shells.



Screw on the adapter housing.

